


Control Panel Instructions

Panasonic LED TV Display:

1. Press the power button **"ON"** to turn on the Panasonic LED TV panel, you should see the display turn on when you select that function.
2. Select Source (Cable TV or HDMI) to show on the display Panasonic LED TV Panel.
3. At the end of use, press power **"OFF"** button, you should see the display turn off when you select that function
4. The bottom row of buttons has **"AUDIO"** and **"MUTE"** that will allow you to play audio without turning on the display.
5. Push the **"AUDIO"** button you will have sound and volume control from the source you have chosen.
6. Push the **"MUTE"** button and the sound will turn off.
7. Using the Cable TV select the Up and Down to change **Channel**

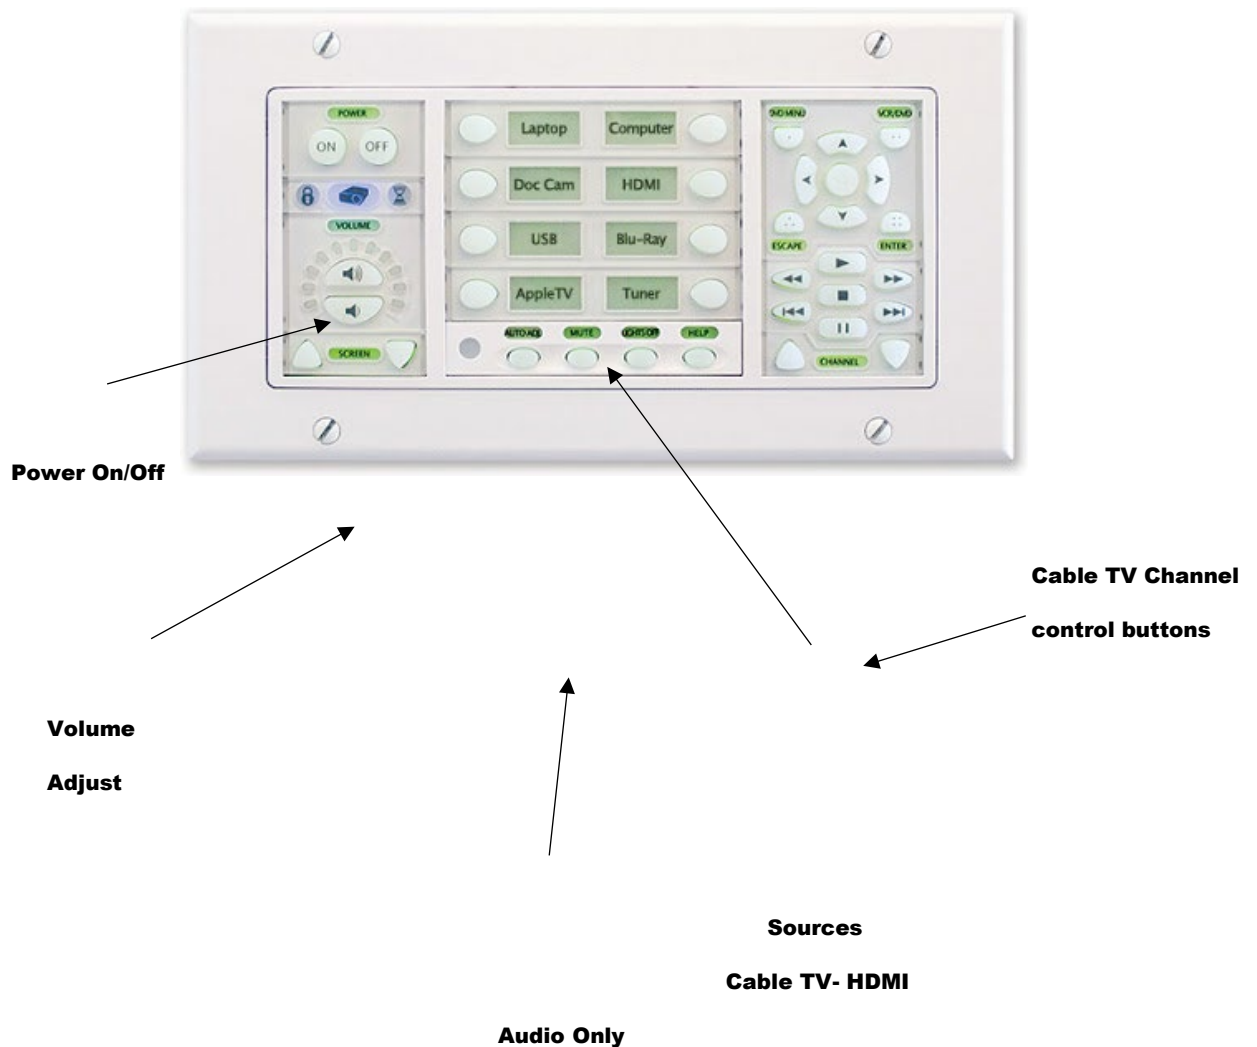

Panasonic LED Display Panel



Power Button Located in This Area

For further assistance please contact Tech Support at Ext# 3033